

DBS44 PROGRAMMER USER MANUAL






sales@deebar.co.za





How to set up a DBS44 Bell Signalling Card

- 1. The DBS44 Bell Signalling Card (Bell Card) must be installed in a position to power up the card and if possible to ring bells.
- 2. Remove the power from the Bell Card.
- 3. Plug the programmer in at CON2 on the Bell Card.
- 4. Restore power to the Bell Card and within 2 second press the "Link" option on the LCD display.
- 5. Once the DBS44 Programmer is linked to the card, it will display the station ID and functions of the 9 & 11 buttons programmed on the Bell Card.

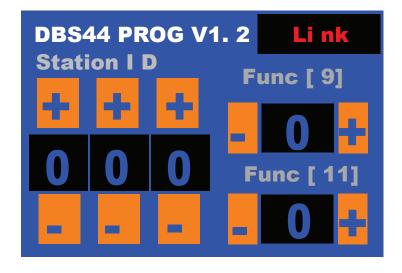

- 6. Press the respective + or to adjust required station ID and functions for the 9 & 11 buttons.
- 7. Fault indication:
- •Func [9] & [11] indicate "0" No link was established, restart at 2
- •Station ID displayed as " / / / " No station ID was programmed. The station ID must be programmed for the DBS44 Bell Card to function correctly.

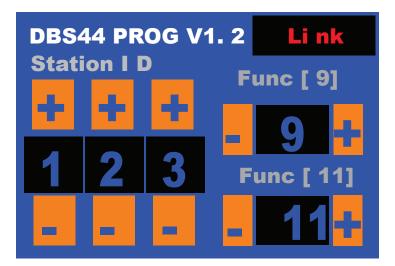

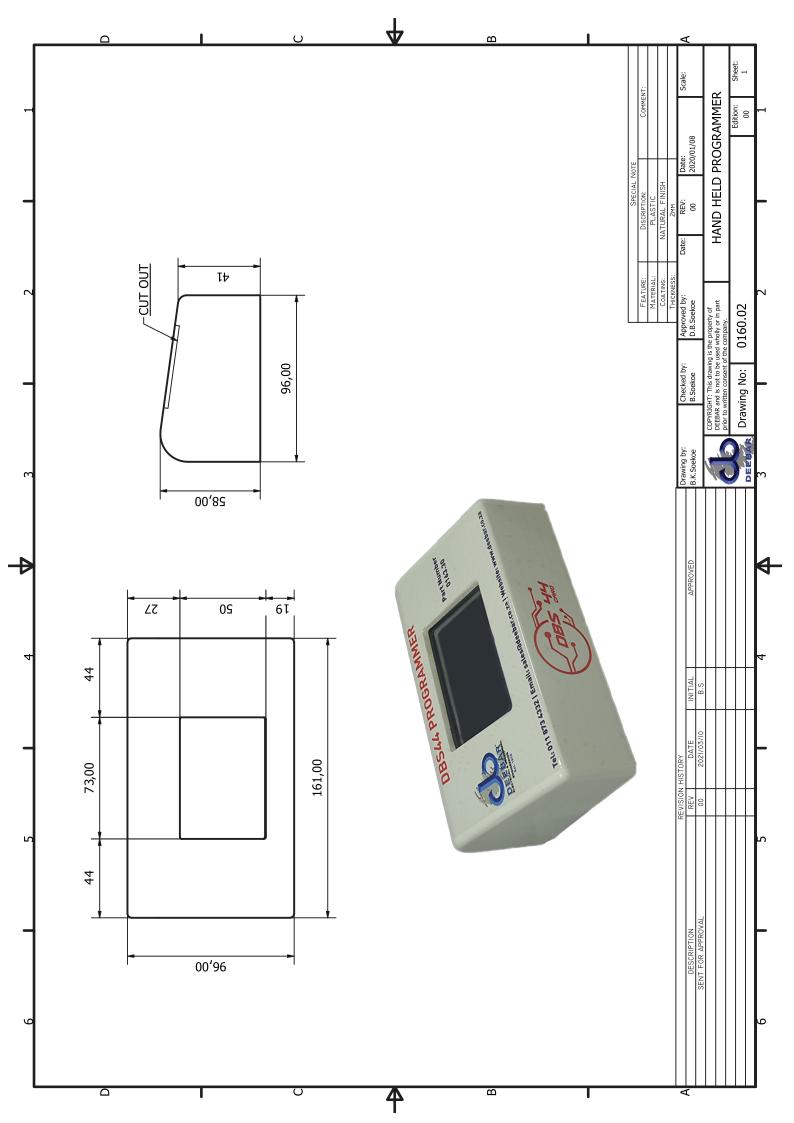

JOHANNESBURG

P.O. Box 40325 Cleveland 2022 Gauteng South Africa

15 Main Reef Road Primrose Ext.1 Germiston 140

Tel:

Fax:

(011) 873 - <mark>4332/3/4/5</mark> (011) 825 - 5045/6 (011) 825 6984

E-Mail: Web Page: sales@deebar.co.za www.deebar.co.za

RUSTENBURG

11 ACBO Industrial Park Rustenburg 0299

Tel:	(014) 596 - 5141/6734
Fax:	(014) 596 - 5898
E-Mail:	rust@deebar.co.za

NORTH WEST

25 Neethling Street Stilfontein 2551

Tel: Fax: E-Mail: (018) 484 - 1864/5 (018) 484 - 1869 northwest@deebar.co.za